## Instructions for Importing a Cut List into the UNIQ Controller

- 1. Download the UNIQ Cut List Generator spreadsheet from the New Tech Machinery website: <u>https://newtechmachinery.com/learning-center/resource/cutlist-generator/</u>
- 2. Use the spreadsheet to generate the cut list and save it onto a USB drive.
- 3. Insert the USB drive into the front of the UNIQ Control Panel.
- 4. If not already at the Home Page, press the Home icon at the top of the screen.
- 5. Press Import/Export.

			7	$\frown$
*	*			
Manual Mode	Run Mod	le Coil Cal	lculator	Import/Export Cut List
		÷	•	
Sta	tus	Length Calibration	Settings	
			C	

6. Press the Set Path button below Import.

NIM I	. A Import/Export
	Import Path:
Import Set Path	
	Export Path:
Export	
Set Path	File Name:
Eject USB	Do Not Remove USB

7. Press Storage Card USB, then press OK.

	Select file
Import	II B My Computer
Set Path	Image: Network Image: Application Data Image: Program File   Image: Flash Image: Control Panel.Ink Image: Temp
	Storage Card USB My Documents Windows
Export	Name: My Computer
Set Path	FI Type: *.*
	К К Х

8. Select the file containing the cut list, then press OK.

NIM I	Import/Export
	Select file
Import	Cut List 01
Set Path	F -
Export	E Name: (Storage Card USB
Set Path	Fi Type: *.*
	🔶 🚘 🖾 ОК Х
Eject USB	Do Not Remove USB

9. Press Import. It will take a minute or two to load the cut list.

M	A S Import/Export	
	Import Path:	
Import	\Storage Card USB\Cut List 01.csv	
Set Path		
	Export Path:	
Export		
Set Path	File Name:	
Eject USB	Do Not Remove USB	

10. After it is finished loading, press Eject USB.

	Import Path:	
Import	\Storage Card USB\Cut List 01.csv	
Set Path		
	Export Path:	
Export		
Set Path	File Name:	

11. Remove the USB drive.